

Jack - Go

Warning

Safe working load must not be exceeded.

SWL: 10T/20T

Pre-use inspection

Inspect Machine

- Inspect all moving parts to ensure they are all in good working condition

Inspect Hydraulics

- Inspect hydraulic ram and action to ensure there are no leaks and seals are in good working condition

Operation

1. Close relief valve by turning hand wheel clockwise to a snug-tight position. To lift tire operate jock by foot (ensure tire is full inflated).
2. To unload, open release valve by turning hand wheel counter-clockwise slowly.

Safety Instructions

- **Do not operate jack on inclined surfaces. Jack must be used on level surfaces only.**
- **Do not overload jack beyond SWL (650kg)**
- **Do not run vehicle while it is on the go-jack**

Hazard Identification and Risk Assessment		
Hazards Identified	Injury	Risk Control Measure in place
Load falling off Jack	Crushing Severed limbs	Ensure load securely placed on platform and if available ensure appropriate restraining devices are used
Pinching Hazard	Severed fingers	Proceed slowly with all task involved to reduce risk of pinching in moving parts of the jack Ensure care is taken when lifting and lowering the jack
Valves failing and load falling	Potentially fatal	Ensure SWL is adhered to