

# **Pallet Truck - Battery**

## **Warning**

Safe working load (SWL) must not be exceeded.

## **Pre-use inspection**

### **Inspect Machine**

- Ensure welds upon the pallet truck are free of cracks or other deformations

### **Inspect Workplace**

- Ensure that the path in which the truck is going to travel is clear and free from any obstructions that could lead to load falling off the platform and leading to injury/damage to personnel/property

## **Operating Instructions**

- Turn on the truck by turning the key to right – Power on
- Turn off the truck by turning the key to left – Power off
- To break move handle all the way down or all the way up
- To move press throttle button in the direction of travel (at centre of handles) SLOWLY
- To raise or lower the tines depress the relevant button (down being the most forward from operators perspective)
- To steer machine move handle from side to side
- To stop machine immediately depress the emergency stop button
- Charge left in battery can be seen via the indicator on pallet truck

## **Safety Instructions**

- Only trained and certified people are permitted to operate this truck
- Inspect the truck before starting working, mark sure it is in good working order
- Always be alert to the working condition around you and watch where your driving, be careful of a any objects intruding or poking into the operator area may pin or crush you
- Be extremely careful when working around docks, dock boards and trailers, be aware of load falling off the truck which can cause death
- Moving parts such as forks or wheels can cut or crush hands, feet, arms or legs
- No riding on the truck
- Battery produce explosive gas
- Completely stop truck, lower forks to the floor, shot off truck with the key or disconnect the battery before leaving your truck
- Ensure you never exceed the SWL
- Be careful while turning as unit will swing wide in the opposite direction, ensure you have adequate clearance before undertaking this manoeuvre