

Block Grab - 500kg

Operation

1. The device is connected to the lifting equipment
2. Before lifting the device, the opening width have to be adjusted
3. The device is placed over the product, set down, the device closes round the product and it can be lifted
4. Set down on the ground again, the device opens automatically, the automatic releases locks it into position so that the device can be lifted without closing up
5. Placed over the next product, the automatic release disengages itself and the product can be lifted
6. The device therefore is a ONE-MAN-MACHINE

To adjust the gripping range

1. Press the spring bolt down
2. Move the rectangular tubes until the opening width is 5 cm bigger then the gripping good
3. Unlock the spring bolt and move the tubes, so that the bolt fixes in one of the holes.

Safety Instructions

- Transport of non-rectangular gripping good is not allowed as this could lead to them falling down
- Before using the device check the functions and the working conditions
- Maintenance and lubrication are only permitted when the device is shut down
- Do not use device, until all faults which can cause safety hazards are removed
- If there are splits at carrying parts of the device immediately stop using it
- The opening instructions must be available at the workplace every time
- Do not remove the data-plates of the machine
- Unrecognisable data-plates must be replaced

Hazard Identification and Risk Assessment		
Hazards Identified	Injury	Risk Control Measure in place
Load falling off Grab	Death	Ensure load securely placed on grab
Pinching Hazard	Severed fingers	Proceed slowly with all task involved to reduce risk of pinching in moving parts of the grab Ensure care is taken when lifting and lowering the grab

For the complete manual please ask at counter