

Plate Clamp

Warning

Safe working load must not be exceeded.

Pre-use inspection

Inspect Machine

- Inspect all moving parts to ensure they are all in good working condition

Operation

1. Place item to be lifted within the opening at the bottom of the universal plate clamp
2. Proceed to lift universal plate clamp slowly so locking mechanism will engage then proceed to lift item. DO NOT lift item any higher than required
3. Place load on ground and slide clamp off load.

Safety Instructions

- **Always move slowly and steadily. Avoid sudden movements (Jerks) as it might cause plate to dislodge from clamp**
- **Ensure Path the plate is going to travel is free and clear of any obstacles that may cause a release in force on clamp and lead to plate coming free**
- **Never stand under load**

Hazard Identification and Risk Assessment		
Hazards Identified	Injury	Risk Control Measure in place
Load falling off Pallet	Crushing Severed limbs	Ensure load securely placed on platform and if available ensure appropriate restraining devices are used
Pinching Hazard	Severed fingers	Keep all body parts clear of pallet puller when providing tension to commence pull