

Magnetic Lifter

Warning

Safe working load must not be exceeded.

SWL: 500kg/1000kg

Pre-use inspection

Inspect Machine

- Inspect all moving parts to ensure they are all in good working condition

Operation

1. Place Magnet on top of the load you wish to move.
2. Turn magnet on by moving handle in a anti-clockwise direction.
3. Ensure magnet has a firm grasp on the object you intend to lift.
4. Proceed to lift item slowly, avoid sudden movements.
5. To remove Magnet, turn handle in clockwise direction.

Safety Instructions

- Do not stand or place any body part underneath of load while lifting.
- Ensure SWL is observed
- If slings or other lifting attachments/devices are being utilised, ensure correct procedures according to their manufactures are being adhered to.

Hazard Identification and Risk Assessment		
Hazards Identified	Injury	Risk Control Measure in place
Load falling off Jack	Crushing Severed limbs	Ensure load securely placed on platform and if available ensure appropriate restraining devices are used
Pinching Hazard	Severed fingers	Proceed slowly with all task involved to reduce risk of pinching in moving parts of the jack Ensure care is taken when lifting and lowering the jack