

# Swift Lifts

## Warning

**Do not Exceed SWL**  
**SWL: 1.3T/2.5T/5T/10T**

## Pre-use inspection

### **Inspect Machine**

- Inspect Machine and ensure that all parts are in good working conditions and free from any damage or defects.

## Operating Instructions

1. Place swift lift on pre-cast lug in concrete fabrication. (Ensure pin size is correct for swift lift that you are using)
2. Connect swift lift to lifting apparatus (crane, forklift etc).
3. Proceed to lift concrete slowly and avoid any jerky or sudden movements. Lift slowly and steadily.
4. Gently place concrete on the ground and disconnect swift from lug on concrete

## Safety Instructions

- **Never stand under load whilst elevated**
- **Never leave elevated load un-attended**
- **Never use swift lift that is not rated to lift that object**

<b>Hazard Identification and Risk Assessment</b>		
<b>Hazards Identified</b>	<b>Injury</b>	<b>Risk Control Measure in place</b>
Crushing	Death	Ensure swift lift is securely mounted on load. AVOID jerky movements