

Glass Clamp 750kg

Operation

1. Move top of glass sheet out from pack of sheets. Allowing enough room for the Abaco glass lifter to be inserted. Do not move glass sheet past centre of balance, keep glass sheet in incline position
2. Position the Abaco glass lifter squarely and in the centre of the glass sheet so that the load is balanced
3. Make sure that the glass sheet is inserted full depth into the opening of the Abaco Glass lifter
4. By lowering the Abaco glass lifter all the way onto the glass sheet the lifter will automatically click into lock. The jaws will then move together and lock onto the glass sheet when the Abaco glass lifter is raised
5. Lift glass sheet slowly to ensure load is balanced
6. Before lowering the load, make sure that there are no obstructions that the load or the Abaco glass lifter could unintentionally rest on. In this event the lifter could drop the load

Safety Instructions

- Never leave a lifted load unsupervised
- Only lift the load as much as necessary and no further
- Permission to work with the glass lifter should only be given to persons who are suitably trained, competent and acquainted with this operating this lifter and the safety regulations.
- Always wear personal protective equipment (PPE) while using the glass lifter

Hazard Identification and Risk Assessment		
Hazards Identified	Injury	Risk Control Measure in place
Dropping Load	Potentially fatal	Always ensure Lifter as adequate hold on item before lifting and ensure correct lift procedures are followed
Pinch Hazard	Lose of fingers	Ensure that all body parts are clear of material hoist lifting mechanisms before commencing lift

For the complete manual please ask at counter