

## A-Frame

This is used for locating sheath faults on cables, and coating defects on pipelines.

It provides direction and magnitude of fault information on the display of the locator.

The A-Frame can be used with RD8100, RD7KTL, RD7KPL or RD8KPDL(B) locator. A Tx-3(B) or Tx-10(B) transmitter is also required to provide a Fault Find signal.

Part No: 10/AFRAME-4K7K8K

